

# 防干擾卡使用說明


當用戶把八達通卡與其他非接觸式智能卡(例如非接觸式信用卡)或金屬物件(例如手提電話)放在一起時，防干擾卡可減低非接觸式智能卡或金屬物件對八達通交易的影響，令用戶無須從銀包取出八達通卡，也可順利進行八達通交易。

## 使用方法

防干擾卡一套兩張，可配合一張或兩張八達通卡使用。




### 用法一：把一張八達通卡及其他非接觸式智能卡放在一起

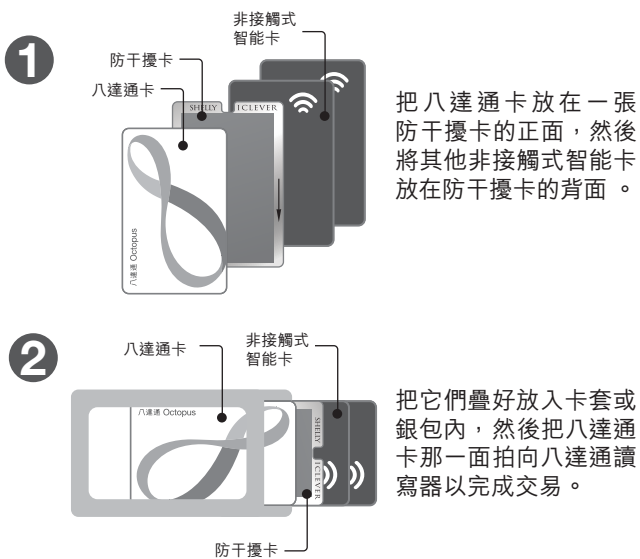

### 用法二：把一張八達通卡及金屬物件放在一起




### 用法三：把兩張八達通卡放在一起

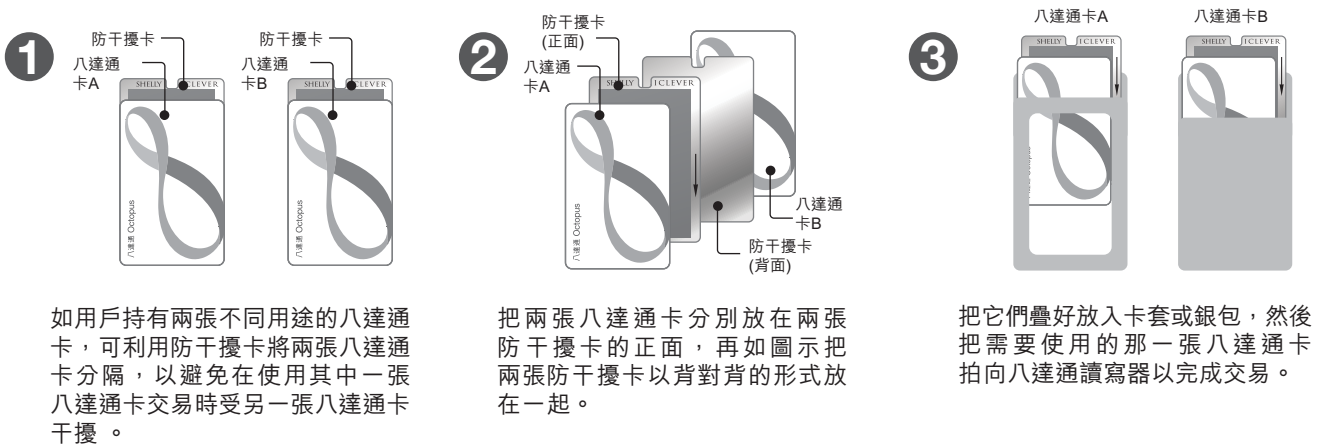

## 注意事項：

- 防干擾卡正面及背面具有不同功能，請正確放置它們，以確保八達通交易順暢。
- 請把八達通卡正確放置在防干擾卡上，以確保防干擾卡能正常運作。

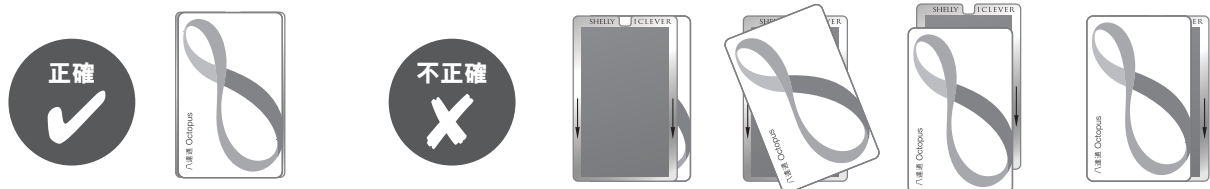

- 請勿折疊及彎曲防干擾卡，以免損害其功能。
- 防干擾卡適用於頻率範圍為 13.56 MHz 的非接觸式智能卡。
- 請勿弄濕防干擾卡，或將其靠近火源，以免損壞。
- 請勿將防干擾卡置於高溫或潮濕的地方，為免變形。
- 防干擾卡的產品規格如有更改，恕不另行通知。

# Interference Shield User Guide


When users keep an Octopus card together with other contactless smart cards (such as, contactless credit cards) or metallic object (such as a mobile phone), the Interference Shield can minimise the adverse effect on an Octopus transaction. With the Interference Shield, users can smoothly perform Octopus transactions, without taking the Octopus card out from their wallets.

## User Guide


Each set of Interference Shield consists of two shields, which can be used with one or two Octopus cards.



### Usage 1: Keeping an Octopus card and other contactless smart cards together

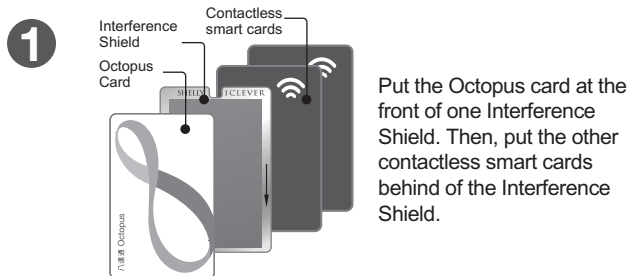


Put the Octopus card at the front of one Interference Shield. Then, put the other contactless smart cards behind of the Interference Shield.

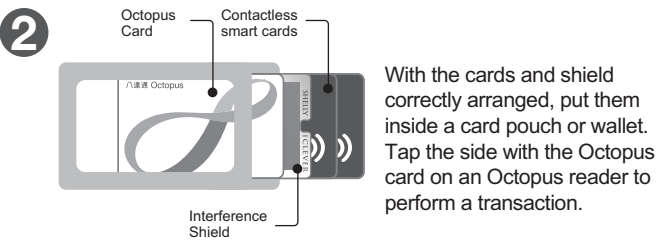


With the cards and shield correctly arranged, put them inside a card pouch or wallet. Tap the side with the Octopus card on an Octopus reader to perform a transaction.

### Usage 2: Putting an Octopus card and a metallic object together

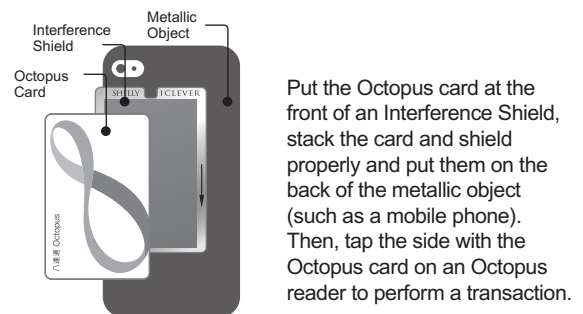


Put the Octopus card at the front of an Interference Shield, stack the card and shield properly and put them on the back of the metallic object (such as a mobile phone). Then, tap the side with the Octopus card on an Octopus reader to perform a transaction.


### Usage 3: Putting two Octopus cards together

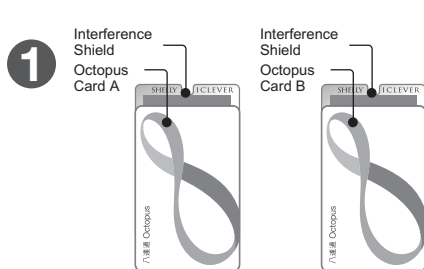

If a user keeps two Octopus cards for different occasions, he/she can use the Interference Shield to separate the two Octopus cards, to avoid interference from one Octopus card while using the other to perform a transaction.

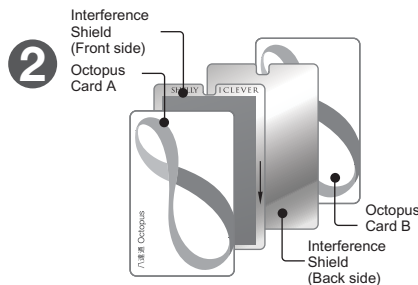


Put two Octopus cards in front of each of the two Interference Shields. Then put the two Interference Shields in a back-to-back position as shown.

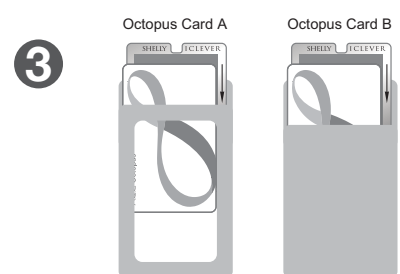

Stack all the cards and shields properly, and put them inside a card pouch or wallet. Tap the Octopus card that you need for that occasion on an Octopus reader to perform a transaction.

### Precautions:

- The front and back of the Interference Shield have different functions. Please position them correctly to ensure a smooth Octopus transaction.
- Please properly position the Octopus card on the Interference Shield to ensure the shield can function properly.

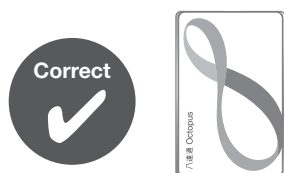

- Do not fold or bend the Interference Shield to avoid damage that could prevent it from functioning.
- The Interference Shield is suitable for contactless smart cards operating at a frequency of 13.56MHz.
- Please keep the Interference Shield away from water or fire to avoid damages.
- Do not store the shield in a place with high temperature or high humidity to avoid deforming the Interference Shield.
- The specifications of the Interference Shield may change without prior notice.